

## Installation Instructions for: Chin Spoiler Honda Shadow Sabre

### Please follow these instructions carefully!

#### Package Contents

- 1 - Chin Spoiler
- 1 - Lower Mounting Bracket
- 1 - Upper and Lower Mounting Screws

#### Tools you will need to provide:

- Phillip Screw Driver
  - Pliers
  - 10mm and 12mm wrenches
- (If you have the complete factory tool-kit, you should have all these tools in the kit.)

#### Before proceeding with the installation instructions:

**Do not remove any of the protective plastic that is attached to the chin spoiler until after you have finished the installation procedure!**

Please read over the entire installation process before beginning the installation. The install procedure should take about 20 minutes.

#### Installation Procedure:

**1. If you have the factory horn, you will need to swivel it downward 180 degrees. Here is the recommended procedure for doing that.**



Using the 12mm wrench, remove the horn bracket bolt. (As you remove the bolt, hold onto the horn so it does not fall. (You may wish to carefully remove the horn wire connectors to make it easier to move the horn.)

Rotate the horn 180 degrees and re-insert the bolt with the horn now "upside-down".



Before tightening the bolt, make sure you have a "gap" between the rear brake pedal and the horn.

(If you had removed the horn wire connectors, re-attach them now.) Now tighten the bolt. (Make it very tight!)

## Installation Instructions for: Chin Spoiler Honda Shadow Sabre

**2. Remove the lower radiator cover bolt using the 10mm wrench.**



**3. Carefully lift the radiator cover off and remove it via the side of the bike.**



**4. Using the pliers, bend both the upper radiator cover tabs forward about 30 degrees as shown. (They bend very easily)**

**5. Turn the handlebars all the way towards the right side of the bike to allow space to insert the chin spoiler from the right side of the bike.**



## Installation Instructions for: Chin Spoiler Honda Shadow Sabre



6. Insert the chin spoiler (**still covered in protective plastic**) placing it on the floor in front of the radiator.

(The protective plastic has been removed in these photos for clarity of the photos.)

Make sure that the screw in the small bracket on the top of the chin spoiler is only slightly protruding through the bracket.


Slowly raise the chin spoiler until the top of the spoiler is about 2 inches above the top of the radiator. (You will have to slightly rotate the chin spoiler as you raise it to avoid the back of the front fender.)

The back sides of the chin spoiler should just be above the protruding frame members. As you guide the spoiler sides back over the frame side, you should push down on the top of the spoiler, guiding the radiator tabs you bent forward in step 4., through the opening in the top of the chin spoiler.




Push the chin spoiler snugly against the front of radiator and push down on the top of the spoiler to make sure it is firmly seated against the top of the radiator.


## Installation Instructions for: Chin Spoiler Honda Shadow Sabre

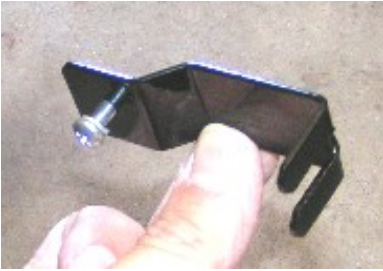


7. Insert the sort screw and lock washer into the lower mounting bracket as shown in the photo.

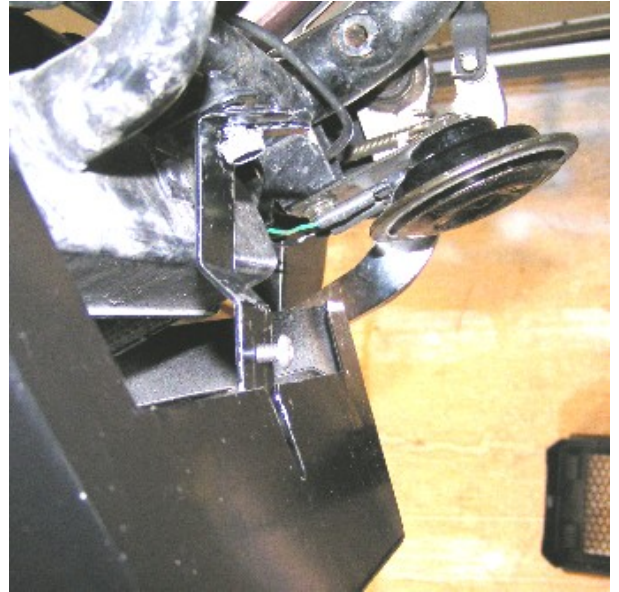

8. Install the lower chin-mounting bracket using the lower radiator-mounting bolt that you removed in step 2. You may have to push the bottom of the chin spoiler towards the front of the radiator in order to be able to get the bracket into the position shown in the photo. Once you have the bracket more or less as shown, push the chin spoiler back against the front of the radiator.

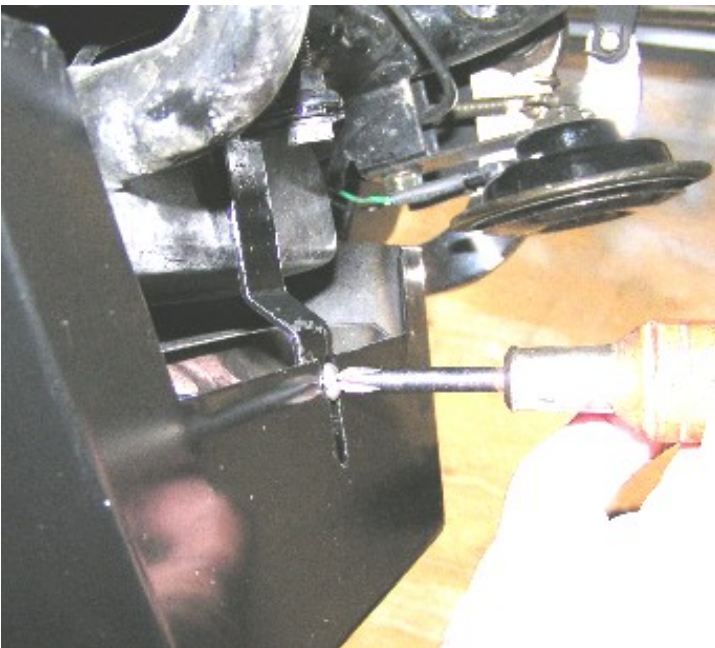

9. Using the Phillips driver, tighten securely the lower bracket screw. Make sure the 10mm radiator cover bolt is very tight.

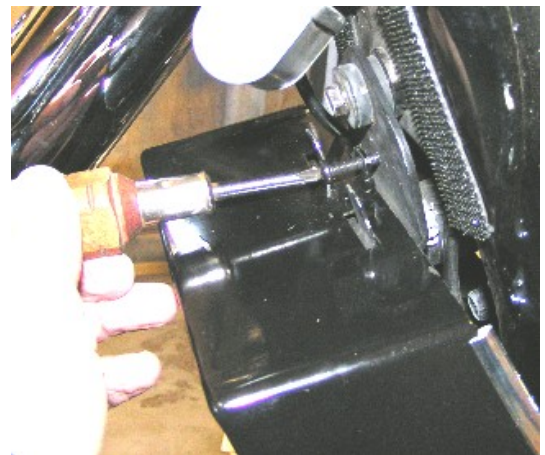

10. Now tighten the upper chin mounting screw until you notice the top of the chin spoiler begin to move the top radiator tabs a little. (Do not over-tighten this screw.)

## Installation Instructions for: Chin Spoiler Honda Shadow Sabre

11. You may now remove the protective plastic from the chin spoiler. The chin spoiler should appear similar to the following photos. Make sure the horn is not rubbing against the chin spoiler.



### Additional Instructions for those who purchase the Chin Spoiler without paint:

Included with your unpainted spoiler are a few strips of adhesive foam, which must be installed after painting it. The following photos indicate the approximate locations of the foam. (The foam strips must be installed at a temperature above 60 degrees F.)

