

## Installation Instructions for: Lower Triple Tree Cover for Honda Shadow Sabre

### **Please follow these instructions carefully!**

#### **Package Contents**

- 1 - Lower Triple Tree Cover
- 1 - Alcohol wipe

#### **Tools you will need to provide:**

- None

#### **Before proceeding with the installation instructions:**


**The special adhesive used to attach the cover must be installed with the bike at a temperature of at least 65°F.** If the cover and the lower triple tree are not at least at this temperature, the adhesive will not activate (in other words, it won't stick!). If it is cold outside and you can't bring your bike into your living room, you can use a hair dryer to warm the lower triple tree casting. If you are going to try this technique, warm up the lower triple tree immediately before proceeding with step 4 (below.)

Remember to handle the parts carefully. Remove them from the packaging with great care. Remember, if you scratch the mirror finish, you may not return the parts to us. We carefully inspect each cover for any defects before packaging.

Please read over the entire installation process before beginning the installation. The install procedure should take about 10 minutes.

#### **Installing the cover:**

1. **Before** removing the backing paper on the adhesive strips, take the cover and practice placing it on the lower triple tree. Basically you are going to align it with the top of the lower triple tree face. From side to side the cover will just fit between the fork covers.

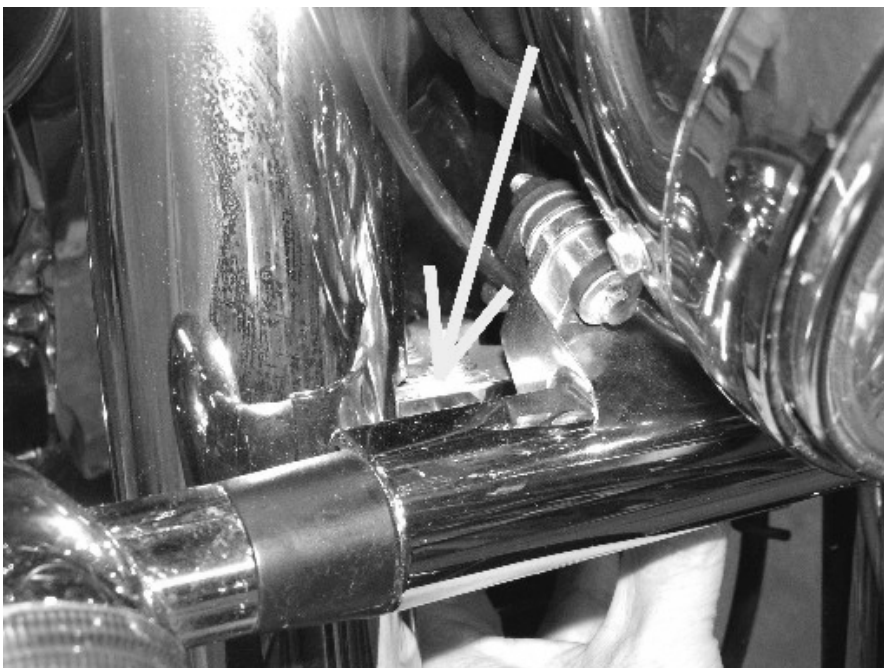

The arrow in the photo indicates the top edge of the lower triple tree that you will want to align with the top of the cover.

Practice step 4. below with the paper backing still covering the adhesive strips so you get used to the procedure for aligning the cover.

**Installation Instructions for: Lower Triple Tree Cover for Honda Shadow Sabre**

2. Clean the face of the lower triple tree and the bottom of it near the round hole towards the rear with the included alcohol wipe.



3. Remove the paper backing from the adhesive strips on the inside of the cover.

4. You are ready to carefully place the cover on the lower triple tree. Take the cover and tilt it so that you can align the top edge of the cover with the top edge of the lower triple tree without touching the adhesive strip to the face of the triple tree.



Stand in front of the bike and hold the cover at this angle as you align it from side to side and make sure the top edge is aligned on both sides. Once you have lined everything up, rotate the cover downward to engage the adhesive strip to the front face of the lower triple tree. Double-check your alignment as you slowly rotate the cover into place. If need be you can make slight changes in the alignment before making full contact with the adhesive strip. As you continue rotating the cover into place, you will at the end make contact with the rear adhesive strip.

---

## Installation Instructions for: Lower Triple Tree Cover for Honda Shadow Sabre

5. After rotating the cover into position, press hard on the front of the cover and the rear bottom area to make sure it is firmly affixed. Congratulations! You are finished.



### **Removing the cover:**

This cover has is not intended to be removed. If you do, you will need new adhesive tape to refasten it.

### **Care of your cover:**

Never use an abrasive cleaner on your covers. You will scratch the finish. You may use any cleaner recommended for chrome-plated surfaces.